


## ASSEMBLY GUIDE

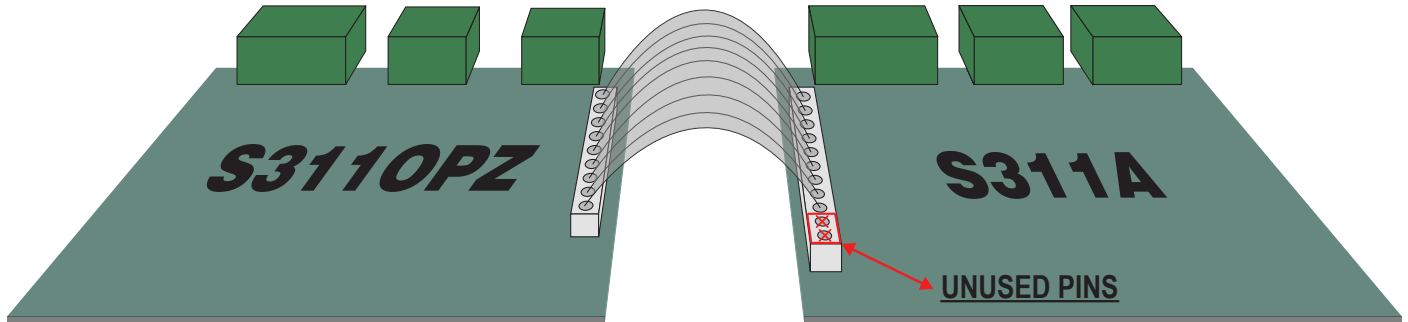

Follow the steps below to install the option board:

- 1 - Make sure the instrument is disconnected from the power supply to avoid damage or safety hazards.
- 2 - Remove the front display of the instrument, taking care not to damage the internal components, and slide out the device board.
- 3 - Connect the S311OPZ board to the S311A board using the supplied flat cable.

Caution: leave the two header PINs (display side) free for proper use

- 4 - Insert the two connected boards into the plastic case of the S311A and switch on the power supply again.
- 5 - To set the parameters of the option card use the programming menu of the instrument or the software Seneca Easy Setup software.